8 Channel

The Operator Interface, part number MPL008, allows the operator to view, access, and control multiple remote analyzers from a convenient, central location. It is a panel-mounted, multi-page interface device, with touch-sensitive graphics for easy operation. It allows an operator to acknowledge and reset alarms, and through password protection, calibrate, read and adjust the settings of each analyzer. The information is presented in easy-to-read formats on a backlit liquid crystal display, measuring 5.6 inches diagonally. Up to 8 PrevEx Flammability Analyzers can be connected to the Operator Interface, using a single daisy-chained data cable, located up to 4,000 feet from the device. When purchased with Control Instruments' analyzers, the Operator Interface is factory-programmed and tested before shipment.

Information is presented on a series of pages, a Home Page and subsequent detail pages for each analyzer. Each page contains a Help button that describes the information on that page as well as navigation options.


Home Page

Displays the status of up to eight analyzers. Each channel shows:

- > Analyzer ID number, set by user
- Numeric reading
- > Vertical value bar graph with oval function button below
- Status messages

Press ALL to display the Master Commands Page. This page sends commands to *all* the analyzers connected to this device, simultaneously.

Press below the bargraph to display the Commands Page for *one* analyzer at a tme.

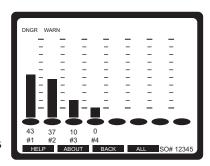

Master Commands Page

This page contains the following Command buttons:

- > Press to acknowledge an alarm.
- Press to reset an alarm.
- Press one of the FROM Functions to activate calibrations or tests. They are password protected.


Master Commands This commands page will effect all the analyzers connected to this device. ACK RESET CALIBRATE ZERO SPAN FULL CALIBRATE TEST HELP HOME

Commands Page

This page contains the following analyzer information:

- > Analyzer ID number, set by the user
- Analyzer's current reading and status
- Press to acknowledge an alarm.
- Press fest an alarm.
- > Press one of the Fine functions to activate calibrations or tests. They are password protected.

Press MORE to show the Analyzer View Page.

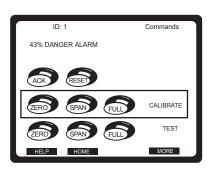





erator Intertace

Analyzer View Page

This page is a real-time image of the control panel. It contains:

- Analyzer ID number, set by user
- The analyzer's electronics as viewed through the window of the analyzer's cover
- > Activation of Menu and Select functions are password protected.

Press MORE to show the Trend Page.


ID: 1 Analyzer View 43 % LFL F D W H Z S I HT Activate Menu and Select HELP HOME BACK MORE

Trend Page

This page contains the following analyzer information:

- Analyzer ID number
- The most recent 30 seconds, updated once per second, starting when the page is first displayed
- > The last 15 minutes of history updated every 10 seconds
- > The last 2 hours of history updated once a minute

Press MORE to show the remaining detail pages.

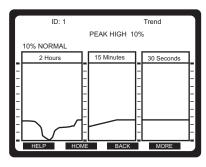

ID: 1

0% NORMAL Warning

Rate

Latches

ailSafe

Auto Ign

30 %LFL

40 % LFL


VER 5-04

SNR672 04-123 ENGLISH

ON FDW

Detail Pages

Other pages show the current function or values assigned to each register for each individual analyzer. These values can be changed using the Analyzer View Page described earlier. Navigation between detail pages is performed using the MORE and BACK buttons.

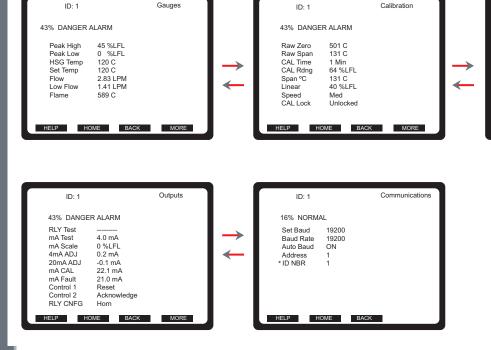



Alarms